

Aqualite Anti-Reflective Heat-Impermeable Film Installation Guide

Follow this guide for best results. Any debris, such as dust and lint between the film and screen, WILL CAUSE BUBBLING. **PLEASE READ** through all of the instructions **BEFORE YOU START**;

To ensure a successful installation:



Thoroughly clean the installation area using a micro-fibre cloth for best results along with a glass / window cleaner and to **AVOID BUBBLES**: Install film to a clean, dust-free screen in a clean environment

- Avoid wearing linty clothes when applying the film
- Apply the film only when the screen is powered off and cool
- A second person may be helpful for film of 32" or larger
- Consider laying the device flat to make installation easier
- Your Film has a front and back protective layer. The usable part of the film is sandwiched in the middle
- Prepare a plastic fine-spray bottle. Half fill bottle with tap water and a drop of washing-up liquid then shake.
- Also required is a squeegee to remove bubbles and lint-free cloth to absorb excess water

1) Use tacky tape to gently remove any remaining lint or dust from your screen. A vacuum with a clean brush attachment can help to remove any remaining dust from the screen and surrounding area.

DO NOT RUSH THIS STEP. Any dust left between the film and the screen can cause bubbling that will require additional attention.

2) Spray the water solution onto the surface of your monitor, making sure no water goes into the electronics if working on a regular, non IP-Rated TV.

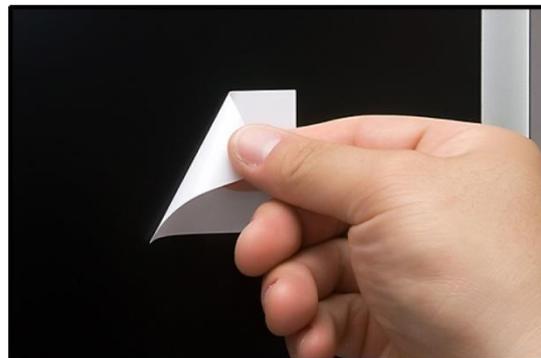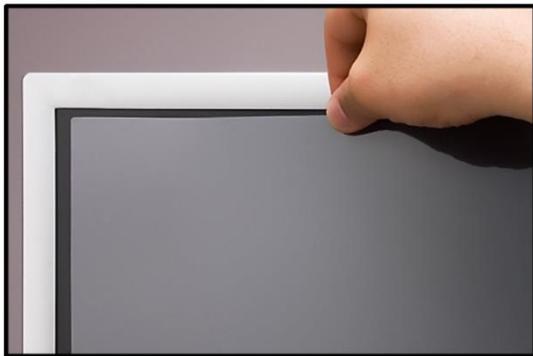

IMPORTANT!

As you remove the protective liner, **DO NOT TOUCH** the film's adhesive backing, as fingerprints can transfer and remain on the film.

3) Hold-up the Film with your colleague and partially remove on the side marked green on the backing layer, gently pull the backing layer away from the A.R. Film, whilst spraying the water solution onto the now exposed surface of the Film.

4) Dispose of the thinner protective layer. Now place the wet A.R. Film onto the wet surface of the screen. Between you and your partner position the Film in-place.

5) Whilst holding the Film in-place with the dry cloth and a squeegee in-hand, gently pull the squeegee from the centre to edge and dry excess water. Repeat process for entire surface, increasing pressure to remove the finer bubbles of air and water.

6) Always pull the squeegee towards you from the centre point of the Film to the edge and NOT from edge to centre.

7) Once all bubbles and excess water are noticeably removed (you can apply a lot of pressure using the squeegee to remove the stubborn air-pockets, as you are only pressing onto the remaining protective layer).

8) Now with a fine blade you are ready to remove the front facing protective layer from one of the corners.

9) Gently and slowly peel back the surface protective layer whilst firmly holding down the A.R. Film.

Allow one hour for the Film to cure.

The installation is now complete

